


MobileCollect Wireless Base Receivers

Overview

- The Base receiver is the core of a MobileCollect Wireless installation
- Base receivers accept the values sent from paired transmitters and forward them to the data collection application in the required format
- Compatible with:
 - All MobileCollect transmitter models
 - LMI wireless gages
 - Chicago Dial Core and VRS "Long-Range" indicators
 - Mitutoyo UWave-T, TM, and TC transmitter models

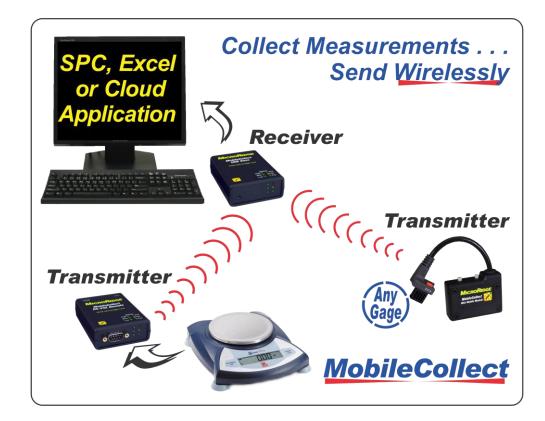

Receiver Models

- Four models:
 - USB Base
 - USB MicroBase
 - RS-232 Base
 - Wedge Base





Features

- Most popular model
- USB serial connection to PC
 - Connection powers the receiver
- Compatible with all transmitter models
- External switch input
 - See slide on this feature



Use with:

- PC-based commercial data collection programs Windows OS
- Spreadsheets, databases, statistical, and webbased programs
 - Requires free WedgeLink Xpress software



Reset Button USB serial output

USB MicroBase

Features

- Mobile version of USB Base
- USB serial connection to PC
 - Connection powers the receiver
- Plugs directly into USB port
- Compatible with all transmitter models



Use with:

- PC-based commercial data collection programs

 Windows OS
- Spreadsheets, databases, statistical, and webbased programs
 - Requires free WedgeLink Xpress software



Features

- DB9 serial and USB serial outputs
 - DB9 output data transfer only
 - USB output data transfer or AC power input
- Compatible with all transmitter models
- External switch input
 - See slide on this feature

Popular uses:

- Customer wanting USB and DB9 serial connection options
- Send data to PLC with RS-232 input





Wedge Base


Features

- USB serial and USB keyboard wedge outputs
 - Powered by USB connection to PC
- Compatible with all transmitter models
- External switch input
 - See slide on this feature



Use with:

- Spreadsheets, databases, statistical, and web-based programs
 - USB keyboard wedge port eliminates need for WedgeLink Xpress program

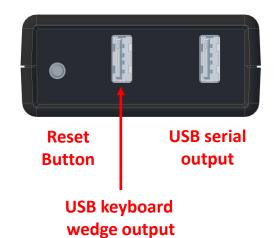

Compare Models

	USB Base	USB MicroBase	RS-232/USB Base	Wedge/USB Base		
USB Serial Connection	\checkmark	\checkmark	\checkmark	\checkmark		
RS-232 Serial connection			\checkmark			
USB keyboard wedge connection				\checkmark		
Powered by USB computer connection	\checkmark	\checkmark	AC power	\checkmark		
Compatible with all transmitter models	\checkmark	\checkmark	\checkmark	\checkmark		
Foot / Hand Switch input	\checkmark		\checkmark	\checkmark		
Reset button	\checkmark		\checkmark	\checkmark		
Unit Price	Contact MicroRidge for current unit pricing					

•••••



Connected Images





External Switch

- Compatible with three receiver models:
 - USB Base / RS-232 Base / Wedge Base
 - Single-input standard
 - 3-input option (additional cost)
- Compatible with three transmitter models:
 - Command Mobile Module
 - RS-232 Remote
 - Digital Remote
- Discuss this feature with MicroRidge before ordering to fully understand the capabilities and limitations

Keyboard Wedge

- A keyboard wedge solution is used to send gage data into programs not designed to accept input from external devices
 - Examples: spreadsheets, databases, statistical programs, & web applications
- Hardware and software wedge solutions are available
 - Correct solution depends upon your data collection needs

	А	В	С	D	E
1	0.126	0.1125	0.1185	0.1255	
2	0.1685	0.1125	0.119	0.139	
3	0.17	0.103	0.1305	0.1395	
4	0.17	0.1285	0.1385	0.1755	
5	0.143	0.1285	0.139	0.176	
6	0.087	0.114	0.139	0.198	
7	0.091	0.1135	0.125	0.2145	
8	0.111	0.1145	0.125	0.2155	
9					

Wedge Options

Hardware

- Wedge Base
- USB connection to PC
- Transfer data without software
- Plug & play solution
- Invisible to operator

Software

- All other receiver models
- WedgeLink Xpress program
 - included at no charge
- Program must be open and activated to transfer data
- More features than hardware wedge


Select Receiver with the features you need

• • • •

•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•
•<

• •

•••

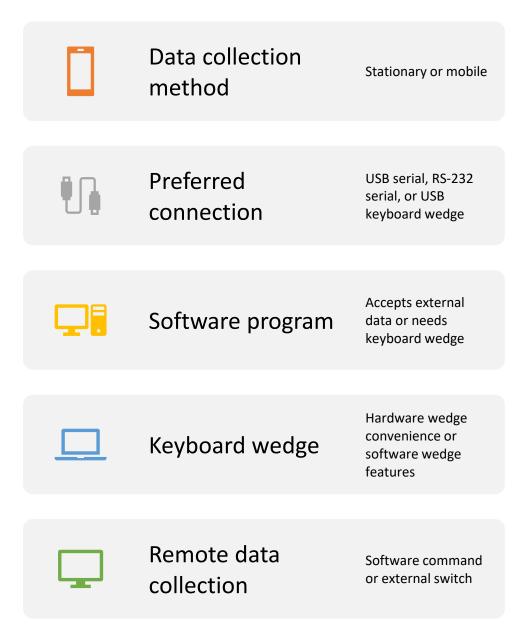

Common Features

All MobileCollect Base receiver models:

- Are compatible with all MobileCollect transmitters
- Are compatible with UWave-T, TM, and TC transmitters
- Are compatible with CDI CORE & VRS "Long-Range" indicator models
- Are compatible with MobileCollect Xpress and Extended Setup programs
- Are compatible with software READ commands
- Offer all data output format options available in Setup programs
- Can pair with transmitters using "on-the-fly" method no setup software

Contact MicroRidge

Office Information

- Hours: Monday Friday
 8am to 4:30pm Pacific
- Phone: 541-593-1656
- Fax: 541-593-5652
- Web: <u>www.microridge.com</u>
- Email: info@microridge.com