

WedgeLink Xpress

Add Time & Date Stamp

Chapter 2

Dec 2018

MobileCollect Wireless

MICRORIDGE

*Measurement Collection Specialists
Connect Any Gage into Any Software*

Overview

- The WedgeLink Xpress program can easily add a “**TIME**” or a “**DATE & TIME**” stamp to each measurement

	A	B	C	D
1	DATE	TIME	VALUE	
2	12/11/2018	10:05:55 AM	9.3	
3	12/11/2018	10:05:56 AM	12.33	
4	12/11/2018	10:05:57 AM	10.54	
5	12/11/2018	10:05:58 AM	16.11	
6	12/11/2018	10:06:00 AM	19.07	
7	12/11/2018	10:06:02 AM	13.66	
8				


MobileCollect Wireless

MICRORIDGE

*Measurement Collection Specialists
Connect Any Gage into Any Software*

Select Parsing

- Open WedgeLink Xpress program
- Activate program
 - Enable Serial Port
 - Send to App via Keyboard
- Go to the Setup Menu
 - Select “Parsing”

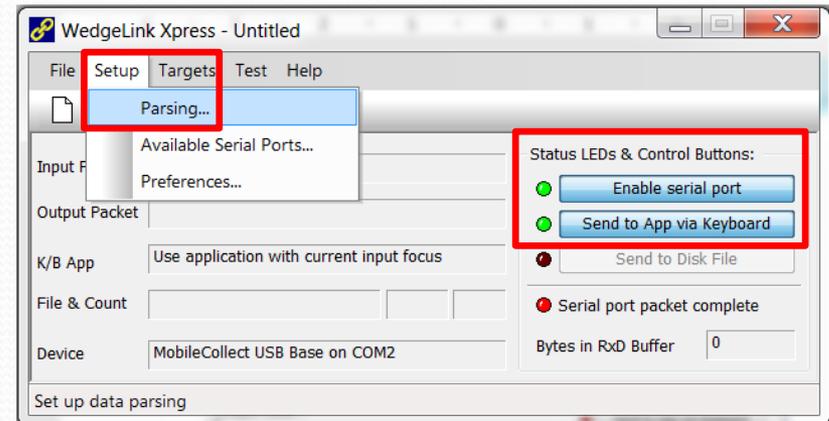


MobileCollect Wireless

MICRORIDGE

*Measurement Collection Specialists
Connect Any Gage into Any Software*

Step 1 of 2

- Select Prefix or Suffix
 - Info displays **before** or **after** the measurement
- Choose Option
 - **“Time”** or **“Date & Time”**

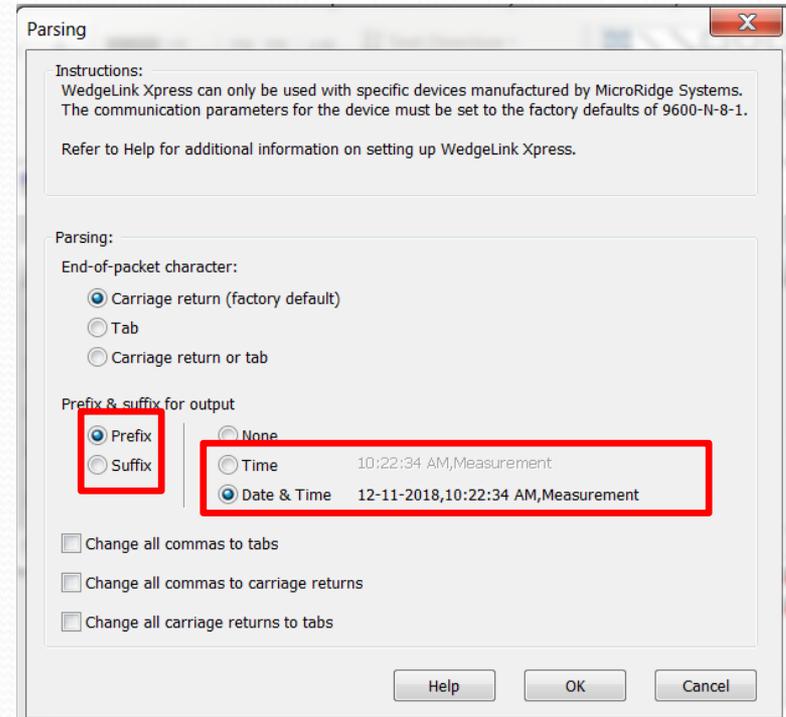


MobileCollect Wireless

MICRORIDGE

**Measurement Collection Specialists
Connect Any Gage into Any Software**

Step 2 of 2

- Check box “**Change all commas to tabs**”
 - This places each data field (Date, Time, Measurement) into a different column in the spreadsheet
- Click “**OK**” button

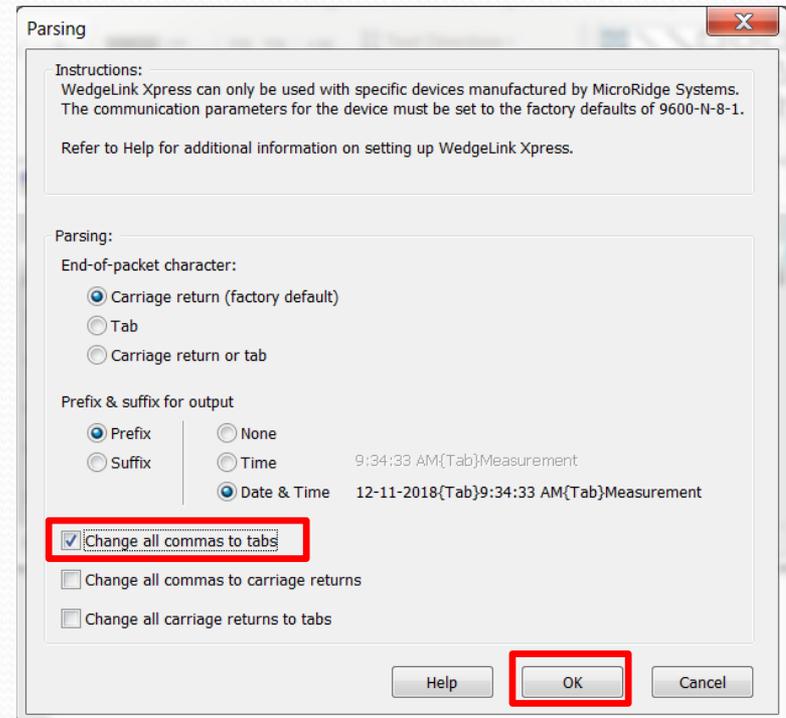

MobileCollect Wireless

MICRORIDGE


*Measurement Collection Specialists
Connect Any Gage into Any Software*

Send Data

- Place the cursor in the proper spreadsheet cell, take a measurement with your gage, and press the READ button on the transmitter or the cable (if available)



Mobile Module Buttons and LEDs

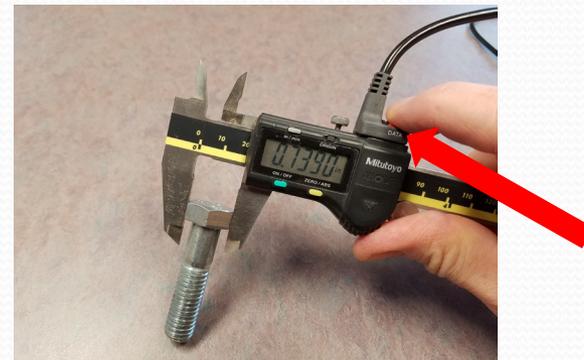

MobileCollect Wireless

MICRORIDGE

**Measurement Collection Specialists
Connect Any Gage into Any Software**

Data Received

	A	B	C	D
1	DATE	TIME	VALUE	
2	12/11/2018	10:05:55 AM	9.3	
3	12/11/2018	10:05:56 AM	12.33	
4	12/11/2018	10:05:57 AM	10.54	
5	12/11/2018	10:05:58 AM	16.11	
6	12/11/2018	10:06:00 AM	19.07	
7	12/11/2018	10:06:02 AM	13.66	
8				

MobileCollect Wireless

MICRORIDGE

***Measurement Collection Specialists
Connect Any Gage into Any Software***

Need Support?

- Contact MicroRidge Technical Support for assistance with this WedgeLink Xpress feature
- Company information
 - Office Hours: Mon-Fri, 8am-4:30p Pacific
 - Office Phone: 541-593-1656
 - Email: support@microridge.com

MobileCollect Wireless

MICRORIDGE

***Measurement Collection Specialists
Connect Any Gage into Any Software***